

SoundOff Signal

3900 Central Parkway
Hudsonville, MI 49426
toll free 800.338.7337
office 616.896.7100

techsupport@soundoffsignal.com
www.soundoffsignal.com



WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

MOUNTING INSTRUCTIONS

Important: DO NOT over tighten mounting screws or nuts. This could cause permanent damage to the unit. Use hardware supplied for mounting.

1. Assemble the UltraLITE as shown in the exploded illustration by inserting the carriage bolt in the channel on the back of the light.
2. Install the pivot block and the angular adjustment arm on the bolt and loosely secure with a nut.
3. Install the head adjustment arm as shown and lightly secure with nut.
4. Snap suction cups into place.
5. Press suction cups to windshield assuring that unit is not located where it obstructs the driver's vision or in the area of air-bag deployment.
6. Make sure the light is horizontal and carefully tighten all nuts.
7. Plug cigarette plug into receptacle and refer to operation instructions to activate light.

For your convenience a universal bracket is supplied if a deck mount application is desired.

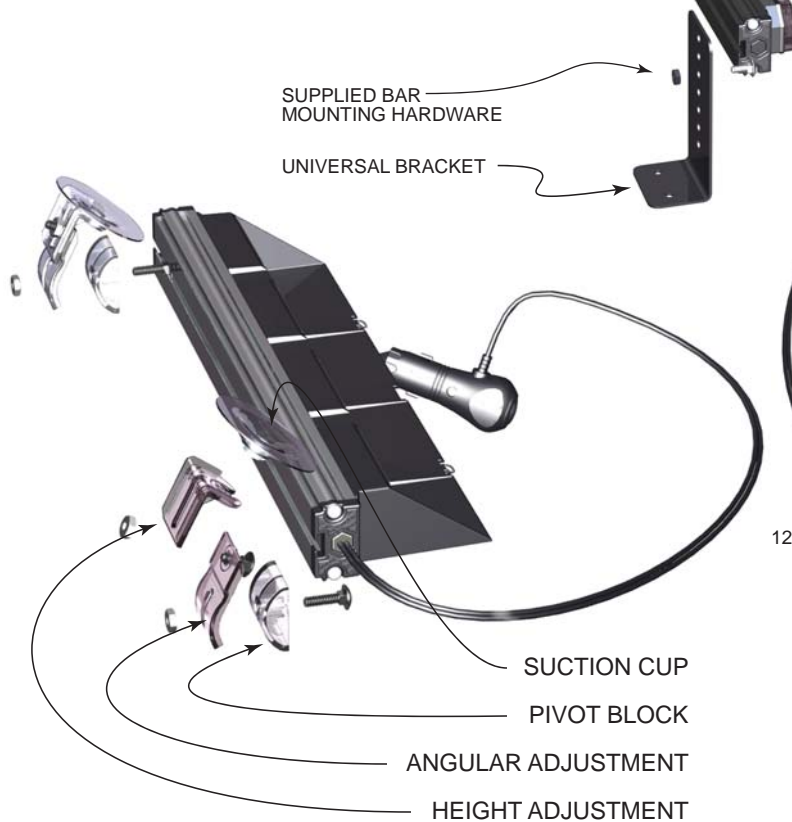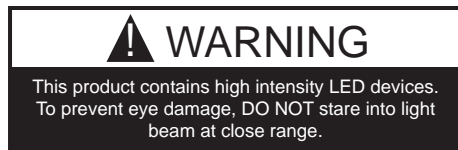

OPERATING INSTRUCTIONS


1. Plug the 12V adaptor into the appropriate receptacle.
2. Press the button for less than one second (momentary) to move forward one pattern.
3. Press and hold the button for one second (until the lights dim) to move backwards one pattern.
4. Press and hold the button for more than two seconds (until the lights turn off) to turn off the UltraLITE.
5. To turn the unit back on, press the button again.

Input Voltage: 10-16Vdc
Current: 2 Amps Maximum

UltraLITE

Interior Warning Bar

WINDSHIELD LIGHT ASSEMBLY INSTRUCTIONS EL3H04A0+(x)

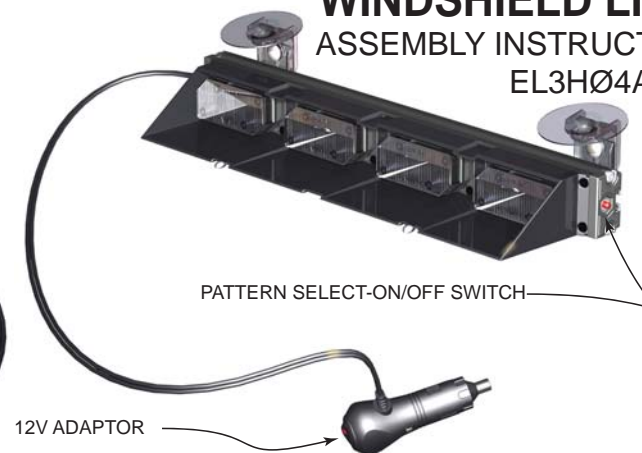

FLASH PATTERNS

| # | Pattern Name | |
|----|------------------------|--------------------------------|
| 1 | Quint Flash | Alternating |
| 2 | Warp Flash | Alternating |
| 3 | Inter-cycle Flash | Alternating |
| 4 | Double Flash | Alternating |
| 5 | Quad Flash | Alternating |
| 6 | 3 Flashes / Second | Alternating |
| 7 | 3 Flashes / Second | Simultaneous |
| 8 | Q-Switch | Alternating |
| 9 | Driver Side | Steady Burn |
| | Passenger Side | Road Runner Flash |
| 10 | Driver Side | Steady Burn |
| | Passenger Side | Quint Flash |
| 11 | E-Pattern Single Flash | Alternating |
| 12 | E-Pattern Double Flash | Alternating |
| 13 | E-Pattern Single Flash | Simultaneous |
| 14 | E-Pattern Double Flash | Simultaneous |
| 15 | Q-Switch | Every other |
| 16 | LiteRyder | Slow Sweep |
| 17 | LiteRyder 2 | Fast Sweep |
| 18 | Progressive | Alternating |
| 19 | Center | Steady Burn |
| | Ends | RoadRunner Flash - Alternating |
| 20 | Center | Steady Burn |
| | Ends | Intercycle - Alternating |
| 21 | Center | Steady Burn |
| | Ends | Q-Switch - Alternating |