


STOBE/HALOGEN SCHEMATIC

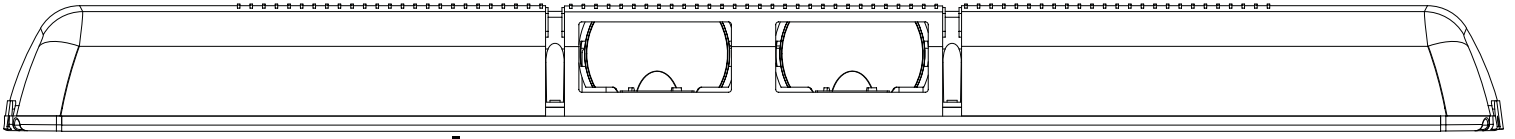

Function	In-line fuse requirement	Wire Color
Rear Strobe Corner Modules	1 Amp	Blue
Front Strobe Corner Modules	1 Amp	Green
Corner Module Pattern Select	1 Amp	Yellow
Corner Module Low Power	1 Amp	Violet
Takedown Left	10 Amp	Orange
Takedown - Right	10 Amp	Orange / White
Takedown - Left	10 Amp	Brown
Takedown - Right	10 Amp	Brown / White
Alley Light - Driver Side	7.5 Amp	Red
Alley Light - Passenger Side	7.5 Amp	Red / White
Inboard Rear Active	1 Amp	Black
Inboard Rear Active	1 Amp	Black / White
Inboard Rear Active	1 Amp	Grey
Inboard Front Active	1 Amp	White
Inboard Front Active	1 Amp	Pink
Inboard Front Active	1 Amp	Light Green
Main Power Input	40 Amp	Heavy Red

Black

WARNING: ALL WIRES MUST BE FUSED TO ENSURE PROTECTION IN THE EVENT A SHORT CIRCUIT OR OVERLOAD CONDITION OCCURS. REFER TO CHART INCLUDED WITH WIRE SCHEMATIC FOR PROPER FUSE RATING.

GROUND

SoundOff
Signal |||||



At anytime during your installation process, feel free to call our technical assistance line at 1-800-338-7337. You can also visit our website at www.soundoffsignal.com or email technical assistance at techsupport@soundoffsignal.com.