




UNIVERSAL UNDERCOVER™ LED INSERT

ELUC2SØ1Ø(x) - 10-16 Vdc, 10' CABLE
 ELUC2SØ25(x) - 10-16 Vdc, 25' CABLE
 ELUC2HØ1Ø(x) - 10-30 Vdc, 10' CABLE

KIT INCLUDES:

- 1 ea. - Assembled light head with Extreme Angle Lens #1, in-line flasher and desired cable length
- 1 - EPDM Mounting Gasket
- 2 - Mounting Screws

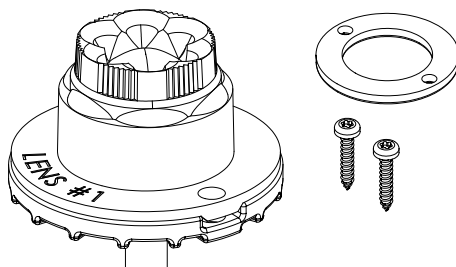

Please see reverse for Technical Specifications and Illustrations

Important Information:

- DO NOT cut the wires between in-line flasher and light head
- Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to your vehicle Owner's Manual for the location of any air bag deployment zones.
- DO NOT connect this device to a strobe power supply. This product is self-contained and does not require an external strobe power supply.




MOUNTING INSTRUCTIONS

Up to 4 LED inserts can be synchronized for alternating or simultaneous flash patterns using the white (SYNC) wire. See back for SYNC Configuration instructions.

1. Remove the reflector assembly according to the vehicle manufacturer's instructions.
2. Establish a location for each UNDERCOVER™ light head with the following parameters:
 - a. Light head must have 1" clearance from plastic/lens surfaces.
 - b. Light head does not interfere with normal operation of lamp.
 - c. Choose a surface that is flat as possible for good sealing when light head is installed.
 - d. For greatest reflector fill and efficiency, place the light as close to the focal point of the reflector as possible.
3. When removing optic lenses, use small flat head screw driver to carefully pry lens off assembly. When replacing lens, do not touch LEDs or circuit board.
4. Using a 1" hole saw, drill a hole in reflector housing in the location selected in step 2.
5. Place UNDERCOVER™ insert into hole drilled in step 5. Using the light as a template, mark the two mounting hole locations.
6. Drill holes marked in step 6 with a #40 (0.098") drill bit.
7. Install UNDERCOVER™ LED Insert assembly using the gasket and #6 screws provided.

9. Complete wire connections and test light prior to remounting vehicle reflector assembly
10. Re-install reflector assembly according to vehicle manufacturer's instructions.

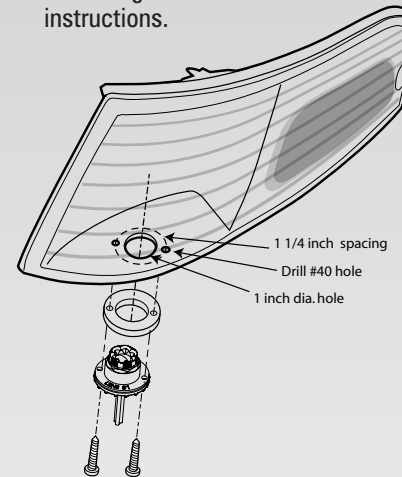

WIRE CONNECTIONS

WIRE HOOK-UP TABLE

WIRE COLOR:	CONNECT TO:
RED	+Vdc
BLACK	Ground (-)
WHITE	Pattern Select/Sync
GREEN	Cruise Mode (+Vdc)

⚠ WARNING-HOT!

This product must be mounted with sufficient clearance from any plastic parts. Failure to do so may result in permanent damage to the housing.

⚠ WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into the light beam at close range.

To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product please visit our website at www.soundoffsignal.com and select the "Warranty & Returns" link along the left column of our home page. If you have questions regarding this product please contact Technical Services, Monday - Friday, 8 am to 5 pm at 1.800.338.7337, press #4 to skip the automated message. Questions or comments that do not require immediate attention may be emailed to techsupport@soundoffsignal.com.

1.800.338.7337. / www.soundoffsignal.com / Thank you for trusting us with your safety!