



3900 Central Parkway

Hudsonville, MI 49426

toll free 800.338.7337

office 616.896.7100


techsupport@soundoffsignal.com

www.soundoffsignal.com

# PREDATOR™

## 90° PREDATOR SINGLE SURFACE MOUNT BRACKET KIT

ASSEMBLY INSTRUCTIONS  
PPRSM90BRKT

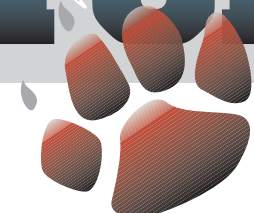

Alternate mounting method to strap steel type push bumper.

**WARNING:** Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.


### Kit consists of:

- 2 Steel Angle Brackets
- 4 1/4"-20 Stainless Steel Bolts
- 4 1/4"-20 Stainless Steel Nuts
- 4 Stainless Steel Flat Washers
- 4 Stainless Steel Lock Washers
- 4 #8-32 Screws

### MOUNTING INSTRUCTIONS

This bracket is designed to be used with the Single Predator Surface Mount Warning Light. For operation, please refer to instructions shipped with light. Important: DO NOT over tighten mounting screws, bolts or nuts. This could cause permanent damage to the bracket and/or Predator Warning Light.

1. Locate flat mounting location on the side of the push bumper for the Predator 90° Mount Bracket. If the push bumper is of strap steel construction, the alternate method may be used which will distribute light to the side of the vehicle.
2. Using the bracket as a template, mark and drill pilot holes for mounting bolts.
3. Drill 9/32" holes and attach bracket with face perpendicular (or parallel if alternate method is used) to the centerline of the vehicle.
4. Route cable through hole in gasket and make electrical connections (Red-power, Black-ground. White is for pattern selection and will be taped after selection is made). If the final location of the cable will be inaccessible, pattern selection must be made before final installation.
5. Install gasket (supplied with light) over rear of housing and loosely install unit with #8-32 screws. Note: Gasket must be used to prevent possible corrosion of the mounting surface if differing metals come in contact.
6. When final position of light is obtained tighten screws. DO NOT OVERTIGHTEN!

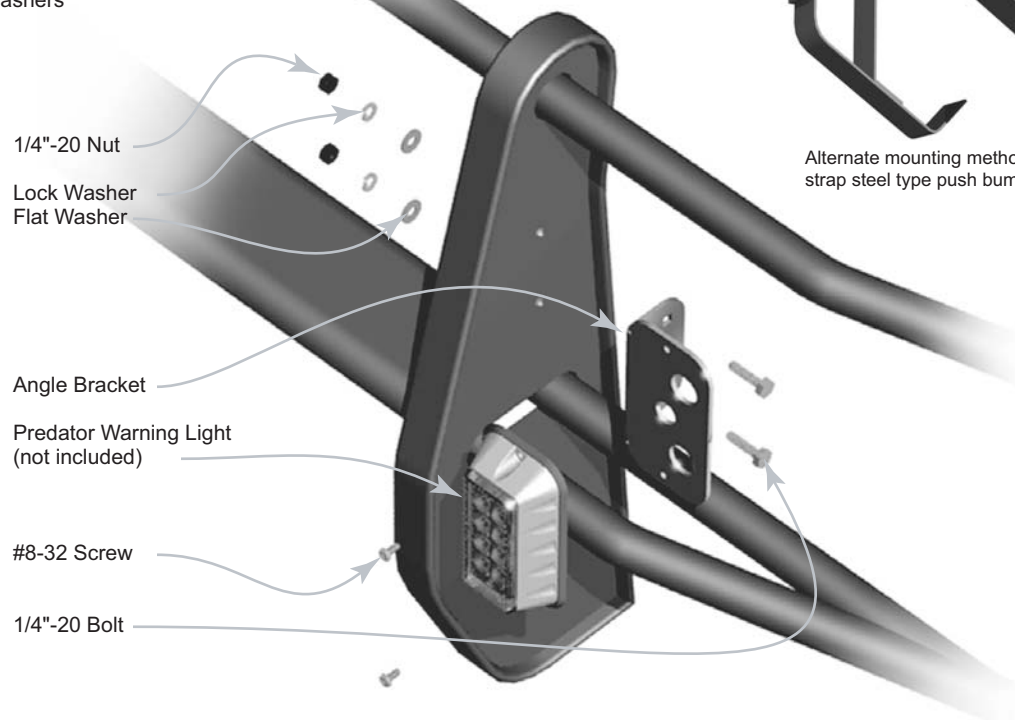

- 1/4"-20 Nut
- Lock Washer
- Flat Washer

- Angle Bracket
- Predator Warning Light (not included)
- #8-32 Screw
- 1/4"-20 Bolt