




3900 Central Parkway  
 Hudsonville, MI 49426  
 toll free 800.338.7337  
 office 616.896.7100  
 techsupport@soundoffsignal.com  
 www.soundoffsignal.com

## LED TRUNK LIGHT KIT (RED) ETLK06(x)

**WARNING:** Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used **ONLY** on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

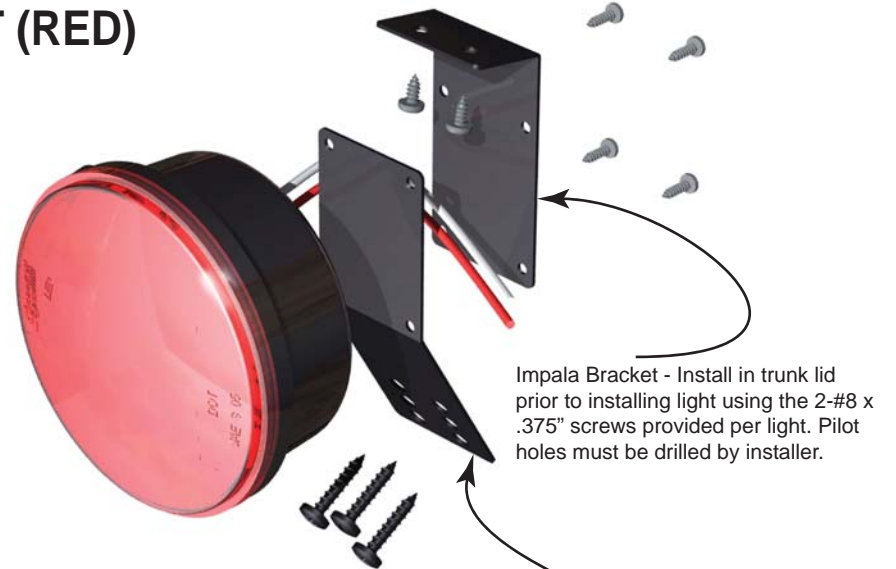

Impala Bracket - Install in trunk lid prior to installing light using the 2-#8 x .375" screws provided per light. Pilot holes must be drilled by installer.

Crown Vic Bracket - Install light on bracket before installing on trunk lid using 3-#14 x 1" screws provided. Screws go into existing holes in trunk lid.



**IMPORTANT NOTE:** Proper function of this installation is dependent on the type of vehicle. The Chevrolet Impala **MUST HAVE** the "Police Package" with the T53 option code; the Ford Crown Victoria **MUST HAVE** the "Police Package" with 476 option code

### Installation

#### Impala-

Install brackets on trunk lid and then attach light to bracket. **DO NOT OVERTIGHTEN!**  
 Cut connectors provided on trunk lid.  
 Splice LED RED wire (+) to wire on trunk lid.  
 Ground WHT wire on LED light to trunk lid with ring terminal (installer supplied).  
 -Scrape paint off in the terminal area to ensure a good ground.

Replace existing thermal flasher located behind passenger side inner wheel house with SoundOff Signal provided Electronic Flasher  
 -Connect GRN wire to a good ground located near flasher mounting. Use self-tapping screw with ring terminal.

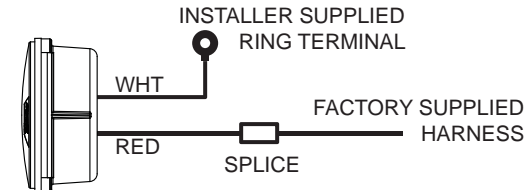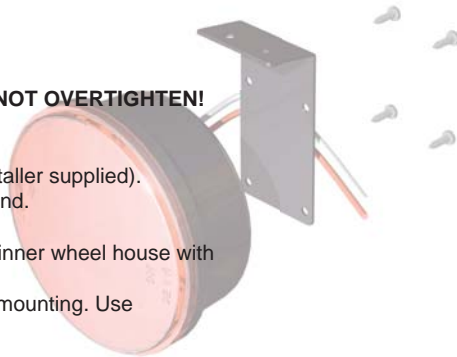



#### IMPALA

#### Crown Victoria-

Install brackets on light-**DO NOT OVERTIGHTEN!** and then attach bracket to trunk lid using 3 holes provided. Note that bracket has 6 holes, only 3 of which are used.  
 Cut connectors provided on trunk lid.  
 Splice LED wires to wires on trunk lid:

- WHITE-BLACK
- RED-BLUE (driver's side)
- RED-BLUE with WHITE TRACE (passenger's side)

Replace existing Ford flasher (left-most relay on driver side trunk lid) with SoundOff Signal provided Electronic Flasher  
 -Ground GRN wire on flasher. Use screw on relay mounting block or self-tapping screw to trunk lid near flasher.

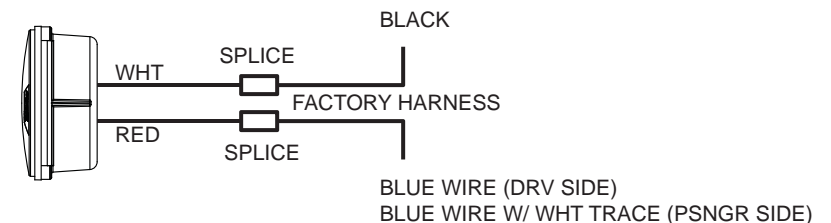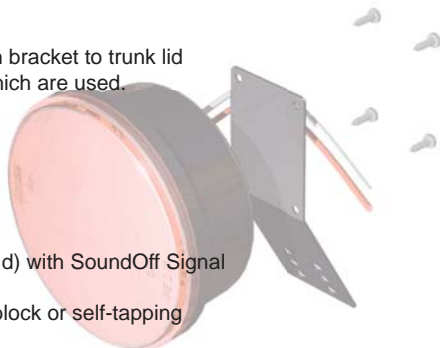

#### CROWN VICTORIA