


## DUAL STACKED STOP/TAIL/TURN WARNING LIGHT ASSEMBLY INSTRUCTIONS EP2DSMSTT(x)

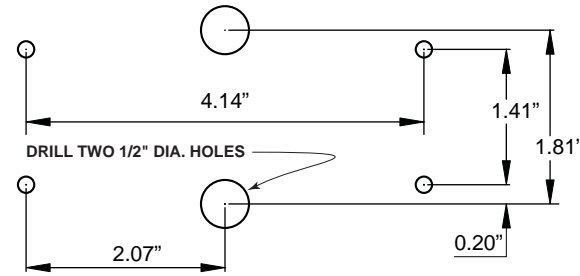

**WARNING:** Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

### WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.

### WARNING

This product is NOT certified as primary Stop/Tail/Turn light.

CURRENT DRAW AT  
12.8Vdc

Red/Amber	1.0A
Blue/White	1.5A

### MOUNTING INSTRUCTIONS

**Important: DO NOT over tighten mounting screws or nuts. This could cause permanent damage to the bracket. Use appropriate hardware for mounting.**

1. Locate flat mounting location for Predator Surface Mount LEDs. If surface is perfectly flat, foam gasket may not be required.
2. Using the hard gasket as a template, mark and drill pilot holes for mounting screws.  
**Note: The mounting holes will be slightly greater than 4-1/8" center to center (long dimension) and slightly greater than 1-3/8" (short dimension). These dimensions are for approximate reference only.**
3. Drill two (2) 1/2" holes on the center line of the mounting hole pattern (see layout - do not scale).  
**Note: If possible, the back side of this hole should be deburred where drill breakthrough occurs.**

4. Route cable through hole in hard gasket and center of foam gasket. Then make electrical connections (Red-power, Black-ground, White is for pattern selection and will be taped after selection is made). If the final location of the cable will be inaccessible, pattern selection must be made before final installation.
5. Install gasket over rear of light and loosely install unit with #8 self-threading screws (stainless steel is recommended). Note: Gasket must be used to prevent oxidation and galvanization of the mounting surface if differing metals come in contact.
6. When final position of unit is obtained tighten screws. DO NOT OVERTIGHTEN!

**IMPORTANT: DO NOT** connect this device to a strobe power supply.

### OPERATING INSTRUCTIONS FOR STOP/TAIL/TURN (Note label on lens)

The EP2DSMSTT(x) has one light that functions as a Stop/Tail/Turn light.

1. With the Red wire attached to +10-30Vdc and the black wire connected to ground, the light will act as a tail light.
2. When +10-30Vdc is attached to the White Wire, the Stop/Tail/Turn function will be activated.

#### WIRE HOOK-UP TABLE STOP/TAIL/TURN LIGHT

Wire Color	Connect to:
Red (Tail Light)	+10-30Vdc
Black	Ground (-)
White (Stop/Turn)	+10-30Vdc (+)

### OPERATING INSTRUCTIONS FOR WARNING LIGHTS

The EP2DSMSTT(x) comes equipped with 1 independently controlled internal flasher, each with 16 user selectable patterns. The internal flasher can be put into slave mode and driven through an external flasher.

1. Connect the Predator BLACK wire to a good, convenient ground.
2. Connect the Predator RED wire to one side of a user supplied on/off switch. Connect the other side of the switch, through a 5Amp fuse, to a source of +10-30Vdc.

#### WIRE HOOK-UP TABLE WARNING LIGHT

Wire Color	Connect to:
Red	+10-30Vdc
Black	Ground (-)
White	Pattern Select

### PATTERN SELECTION WARNING LIGHT ONLY

1. Turn Predator ON.
2. Touching and removing the WHITE wire to ground will advance the Predator to the next flash pattern. See flash pattern table. Continuing to touch and remove the WHITE wire to ground will allow you to scroll through the pattern list. After pattern #16 is reached the list will start over again at pattern #1.

NOTE: The Predator is equipped with flash pattern memory. Once you have selected a pattern the Predator will always activate to that pattern every time the unit is turned on. Tape up and secure the WHITE wire so that your selected pattern will not accidentally be changed.

### SLAVE MODE FOR WARNING LIGHT

The Predator is capable of being activated through the use of a user supplied flasher by putting it in slave mode.

1. Permanently connect both Predator WHITE and BLACK wires to a good, convenient ground.
2. Connect both Predator RED wires, through a 5Amp fuse, to the output of a +10-30Vdc switching flasher.

NOTE: The Predator is a factory sealed unit that CANNOT be serviced in the field. Any attempt to gain access to the Predator unit will cause permanent damage and void its warranty.



3900 Central Parkway  
Hudsonville, MI 49426  
toll free 800.338.7337  
office 616.896.7100

techsupport@soundoffsignal.com  
www.soundoffsignal.com

# DUAL STACKED STOP/TAIL/TURN WARNING LIGHT

## ASSEMBLY INSTRUCTIONS

### EP2DSMSTT(x)

### Operating Instructions for Stop/Tail/Turn

1. With the Red wire attached to +12Vdc and the black wire connected to ground, the light will act as a tail light.
2. When +12Vdc is attached to the White Wire, the Stop/Tail/Turn function will be activated.

### Predator Sync Configuration Instructions

1. Set ID#
  - a. Identify which pattern and sequence you want and look up ID#s on table.
  - b. Connections
    - i. RED: +12Vdc
    - ii. WHT: +12Vdc (Note: you will need to disconnect after power is applied)
    - iii. BLK: Ground
  - c. Apply power to unit
  - d. Without disconnecting power from unit, disconnect WHT wire
  - e. Momentarily connect WHT to Ground to change ID #
    - i. Identify ID# by number of sequential flashes
    - ii. Possible ID#s: 1 – 4
  - f. Disconnect power from unit to get out of ID mode.
2. Set Pattern
  - a. Reapply power to units.
  - b. Once all Light Head ID#s are configured, make sure all lights are flashing the same pattern
  - c. Connect corresponding colored wires of all units together: RED to RED, etc.
  - d. Change Pattern
    - i. Momentarily connect WHT wires to Ground
    - ii. Observe pattern change on all lights connected
  - e. Insulate all wires by taping with electrical tape
3. Connect Master Switch for Application

### 1 WARNING LIGHT (i.e. Single EP2SMSTT(x)) Sync not functional

For Single Light Operation: Follow the ID Selection steps above and set the PREDATOR II to ID#1 if it is not already.  
NOTE: Steady Burn is produced for patterns 9 & 10 in Single Light Operation and all flash patterns are visually normal.

### 2 WARNING LIGHTS

**ALTERNATING:** To obtain Alternating patterns, follow the ID SELECTION steps and set one PREDATOR II to ID#1 and the other to ID#3. Then proceed to the PATTERN SELECTION steps.

**SIMULTANEOUS:** To obtain Simultaneous patterns, follow the ID SELECTION steps and set both PREDATOR II lights to ID#1. Then proceed to PATTERN SELECTION steps.

### 4 WARNING LIGHTS

**X-Pattern:** To obtain X-patterns, follow the ID SELECTION steps and set one of the four PREDATOR II lights to ID#1, one to ID#2, one to ID#3, and one to ID#4. Then proceed to PATTERN SELECTION steps. NOTE: Be sure to mount each PREDATOR II in the correct placement based on ID#.



### FLASH PATTERNS for DUAL SURFACE MOUNT PREDATOR

#	Pattern Name	1 Light	Alternating 2 Lights	Simultaneous 2 Lights	X-Pattern 4 Lights	Flashes/ Minute
1	Quint	X	X	X		70
2	Warp	X	X	X		350
3	Inter-Cycle Flash	X	X			
4	Double Flash	X	X	X		70
5	Quad Flash	X	X	X		80
6	Power Pulse	X	X	X		180
7	Road Runner	X	X	X		113
8	Q-Switch	X	X			
9	Road Runner Steady Burn	X	X			113
10	Quad Steady Burn	X	X			80
11	E-Ideal Single Flash	X	X	X		200
12	E-Ideal Double Flash	X	X	X		146
13	Quad2 Flash	X	X	X		67
14	Double2 Flash	X	X	X		95
15	X-Warp				X	
16	X-Double				X	
17	PowerRunner	X	X	X		
18	LCR Quint	X	X	X		
19	Warp <sup>3</sup>	X	X	X		
20	Ultra Warp	X	X	X		545
21	Thunder and Lightning	X	X			
22	LiteSpeed	X	X	X		85
23	SuperSonic	X	X	X		170
24	LCR LiteSpeed	X	X	X		
25	SuperSonic Ultra	X	X	X		
26	TempoShift	X	X	X		
27	TempoShift Warp	X	X	X		
28	SBE2	X	X	X		67
29	C <sup>2</sup>	X	X	X		200
30	U <sup>2</sup>	X	X	X		176
31	UltraGlow	X	X	X		
32	Cyclone	X	X	X		
33	Chameleon	X	X	X		

X-Pattern below only applies when 4 warning lights are displayed.

### X-Pattern Sequence

ID#1 > ID#4 > ID#2 > ID#3

### X-Pattern Light Head Placement

ID#4	ID#2
ID#3	ID#1